

KOMBINAČNÍ TABULKA

Multi provedení

Kombinace vnitřních jednotek RAS-MULTI-SPLIT																																											
1 vnitřní		2 vnitřní jednotky						3 vnitřní jednotky										4 vnitřní jednotky																									
	10	13	10	13	13	10	10	13	13	16	16	18	10	10	10	10	10	10	13	10	10	13	13	13	13	13	16	10	10	10	10	10	10	10	10	10	10	13	13	13	10		
			10	10	13	16	18	16	18	16	18	18	10	10	10	10	13	13	13	13	16	16	13	13	16	16	18	16	18	16	18	16	18	16	18	16	18	16	18	16			
														10	13	16	18	13	16	18	13	16	18	16	18	16	18	16	18	16	18	16	18	16	18	16	18	16	18	16			
																													10	13	16	18	13	16	18	13	16	18	13	16	18	13	16
RAS-M18UAV-E																																											
		RAS-3M26GAV -E																																									
								RAS-4M27GAV -E																																			
																		RAS-5M34UAV-E																									

4 vnitřní jednotky														5 vnitřních jednotek																														
13	10	10	10	10	10	10	10	13	13	13	13	13	13	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	13	13	13	13			
18	10	10	13	13	13	13	13	13	13	13	13	13	13	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	
18	16	18	16	13	16	18	13	13	16	16	18	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13
-	18	18	16	18	18	18	16	18	16	18	18	10	10	10	10	13	13	13	16	13	13	13	16	13	13	16	13	13	13	16	13	13	13	13	16	13	13	16	13	13	13	13		
												10	13	16	18	13	16	18	16	13	16	18	16	13	16	18	16	13	16	18	16	13	16	18	16	13	16	18	16	13	16	18	16	
RAS-5M34UAV-E																																												

U venkovních jednotek Multi-split pro 3, 4 a 5 vnitřních jednotek je nutné z technických důvodů instalovat minimálně 2 vnitřní jednotky.